




Noise Filter

⚠ The earth or ground wire must be connected! The timer needs this connection as a noise filter to ensure a stable operation environment.

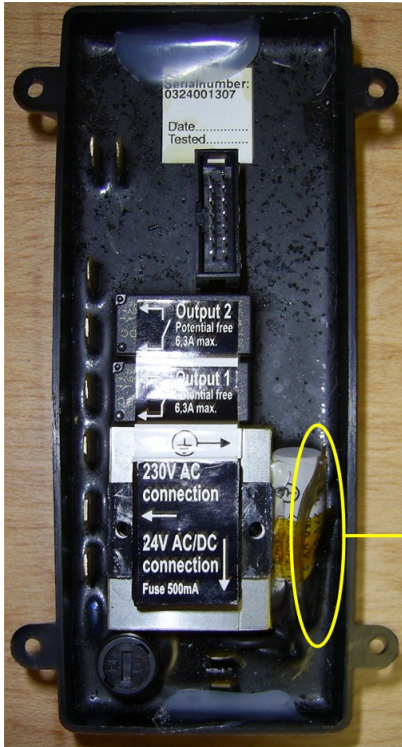

The ground wire must be attached to a properly earthed socket.

This noise filter is needed to ensure a stable operation environment and will help to avoid failures.

⚠ Be aware! For the noise filter to work, the ground wire must be properly connected.

Inepro will not take any responsibility for correct timer functionality if the ground wire isn't connected as instructed.



The ground wire must be attached to a properly earthed socket.

This noise filter is needed to ensure a stable operation environment and will help to avoid failures.

⚠ Be aware! For the noise filter to work, the ground wire must be properly connected.

Inepro will not take any responsibility for correct timer functionality if the ground wire isn't connected as instructed.