



Nayax Interface Board - Version 2 (with coin acceptor)

- The power must be supplied to one of the two power connectors (marked with 'power') on top of the board.
- Inhibit Control: When an external power source is used to inhibit the Nayax terminal, use the 'External power' configuration (fig. 1). The plus line to the fourth pin, and the null line to the fifth. Alternatively, when the internal power is used (together with an external switch), choose one of the two other configurations ((fig. 3) to switch to the null, or (fig. 2) switch from the plus).
- The included Nayax connector cable must be used.
- The relay time can be set on the board. P1 and P2 each can be set analog to a position between 1 and 10 seconds. P1 is for relay 1, P2 for relay 2.

