




**Copier bracket - Item No. 132154**



1. Align the copier bracket with the PayCon, so that the largest hole is at the network connection of the PayCon.
2. Make sure all the cables are in place and the compartment flaps are closed. (There are no flaps in place on the picture).
3. Fasten the screws.
4. Attach the attachment plate for your copier type to the copier.
5. Screw the copier bracket to the attachment plate.

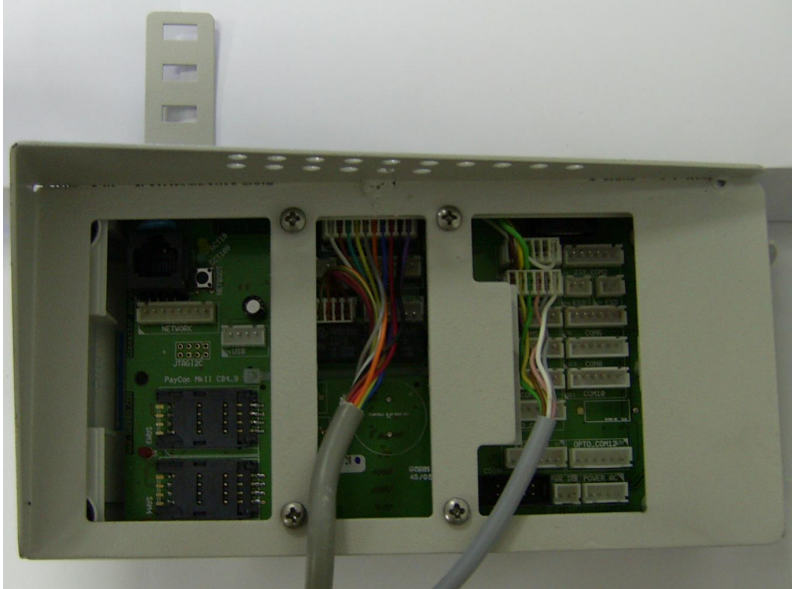

For help with connecting the cables please refer to your PayCon technical manual.