



Smartline Drill Template THIS SIDE UP

Smartline Drill Template THIS SIDE UP

∅ 10mm hole ∅ 10mm hole

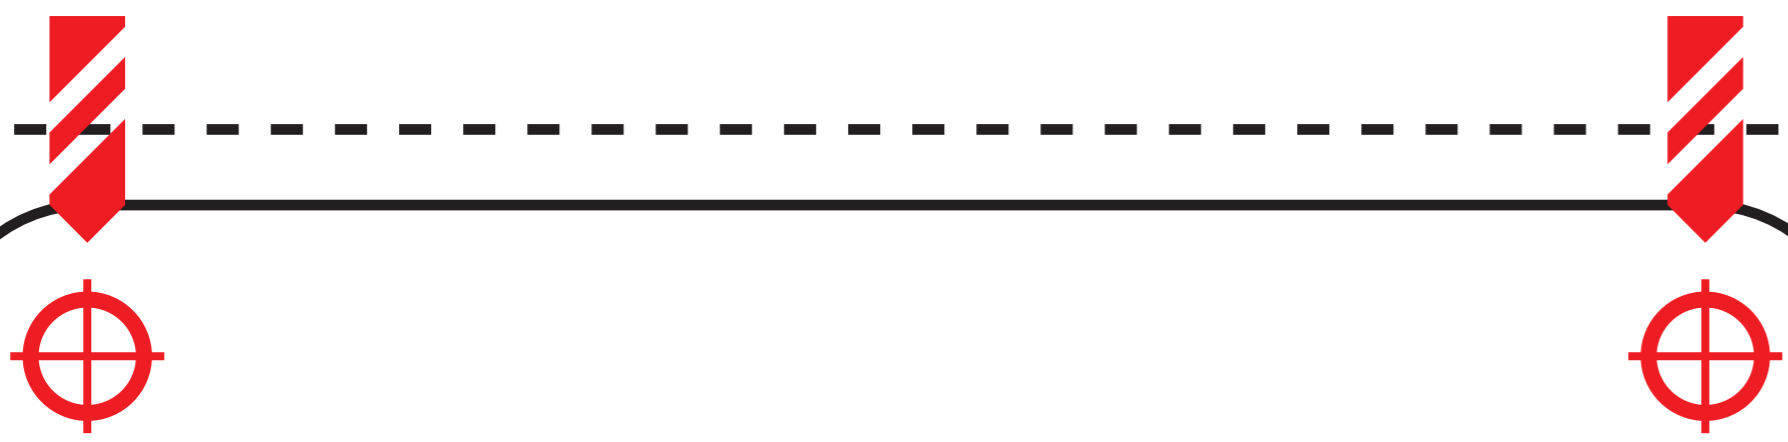

1. Always check first if the template is printed to the correct size by measuring the lines below.

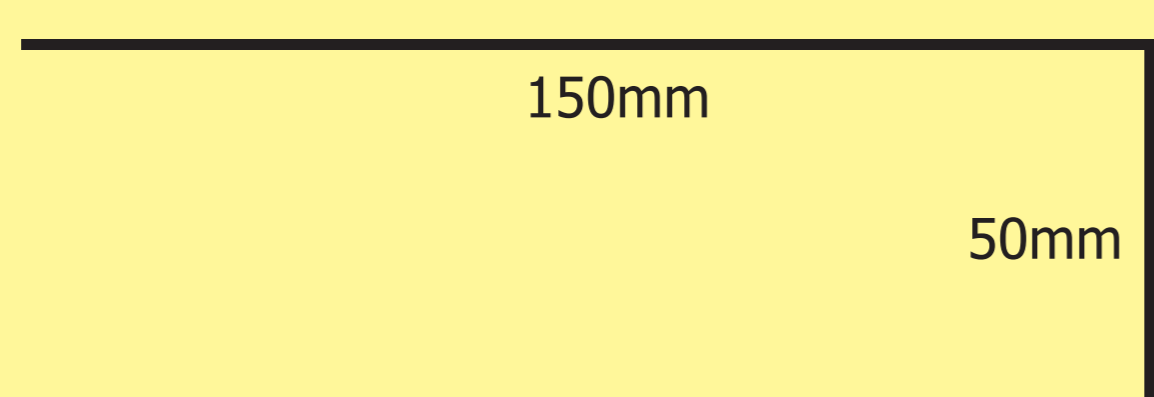

2. Align the **Level Line** with a spirit level and ensure the correct height from the ground.

3. Make sure to leave room for the casing (indicated by **black** dashed line) and **30cm to the right** for the door to be able to fully open.

4. Drill the four 10mm holes at the points indicated by the **red** circles.

Level Line

The level line should be between 1,2m and 1,3m high from the ground to comply with the EFT ergonomic directive

The door needs 30cm to the right to be able to fully open



∅ 10mm hole




∅ 10mm hole




∅ 10mm hole

∅ 10mm hole

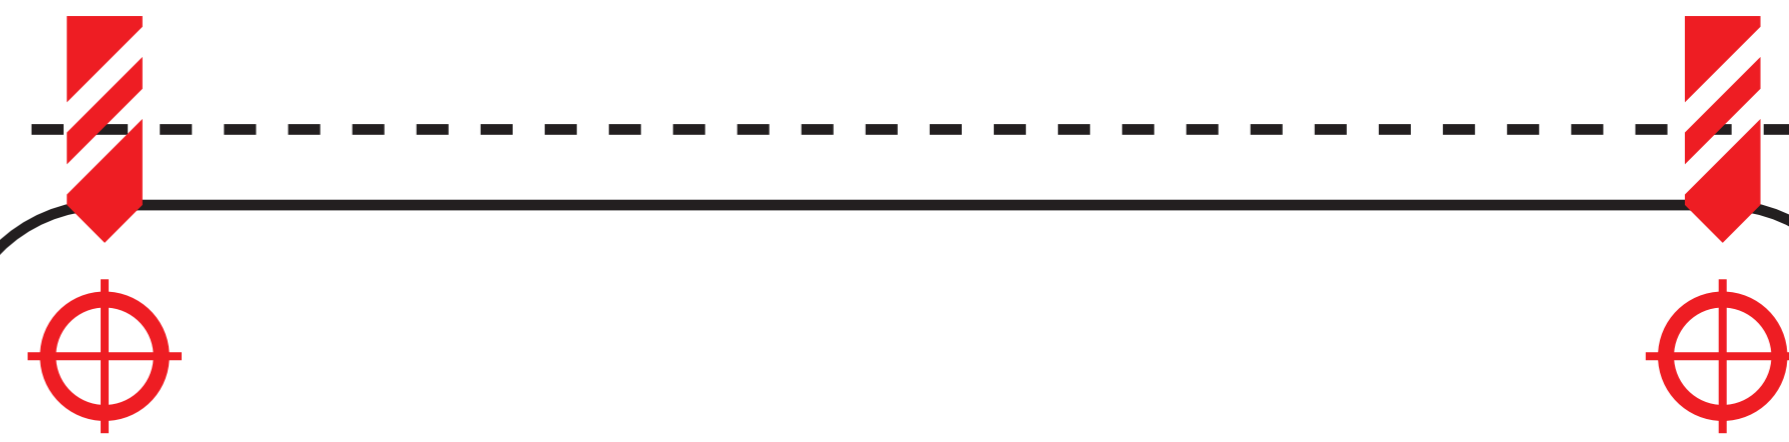

1. Always check first if the template is printed to the correct size by measuring the lines below.

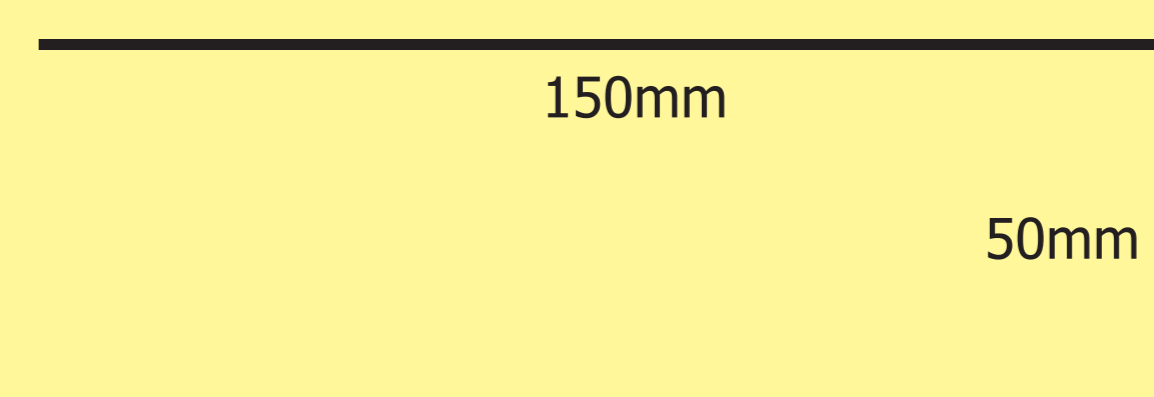

2. Align the **Level Line** with a spirit level and ensure the correct height from the ground.

3. Make sure to leave room for the casing (indicated by **black** dashed line) and **30cm to the right** for the door to be able to fully open.

4. Drill the four 10mm holes at the points indicated by the **red** circles.

Level Line

The level line should be between 1,2m and 1,3m high from the ground to comply with the EFT ergonomic directive

The door needs 30cm to the right to be able to fully open



∅ 10mm hole



∅ 10mm hole

